

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS APPLIANCE

DANGER — To reduce the risk of electric shock:

- 1) Do not use in bathtub or in a shower.
- 2) Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.

WARNING

- 1) This appliance is not for use by children or individuals with certain disabilities.
- 2) Use this appliance only for its intended use as described in this manual.
- 3) Never operate this appliance if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- 4) Never drop or insert any object into any of the openings.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

Congratulations on your purchase of the Conair® Serene Sounds System. This system provides soothing sounds to relax you and to mask unwanted noise. The Conair® Serene Sounds System allows you to create a soothing environment at home, at the office or anywhere you would like to relax. Used as directed, the Conair® Serene Sounds System will provide you with dependable service and can be used anywhere as it is battery operated. The Conair® Serene Sounds System operates with three 1.5 volt AA batteries (not included).

FEATURES

- 1) **6 High-Quality Digital Recordings (press sound on/off to change sounds)**
 - Summer Night: Relax to the soothing sounds of summer.
 - Rainfall: Ease the mind with the peaceful patter of rain.
 - Ocean Waves: Wash away tension with the calming effect of the incoming tide.
 - Babbling Brook: Soothe your soul with the serenity of a flowing stream.
 - Heartbeat: Calm little ones with the rhythmic beating of a heart.
 - Tropical Forest: Travel to a world full of tranquil tropical sounds.
- 2) Speaker for realistic sound quality.
- 3) Variable volume control with ON/OFF.
- 4) Sound control button (chosen sound lights up).
- 5) 15-30 & 60-minute timer (chosen time lights up).
- 6) Uses three AA batteries (not included).

TO INSERT BATTERIES

- 1) Unlatch and lift off the battery compartment door (located on the bottom of the sound system).
- 2) Insert three AA 1.5 volt alkaline batteries, as shown inside the battery compartment.
- 3) Replace the battery compartment door and return the sound system to its upright position.

NOTE

Use only alkaline batteries. Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel cadmium) batteries. Replace all batteries of a set at the same time. Clean the battery contacts and those of the device prior to battery installation. Remove used batteries promptly. Remove batteries when storing the machine for an extended period of time.

FCC MARKINGS

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


HOW TO OPERATE THE CONAIR® Serene Sounds SYSTEM

- 1) Insert three AA batteries (not included) as shown inside the battery compartment, on the bottom of the sound system. LED will light to show power ON.
- 2) Turn the ON/OFF switch clockwise to turn on the SOUND system. The sound system will generate the natural sound selected the last time the system was used.
- 3) Choose one of six natural sounds by pressing the sound button once, then again for the next sound and then continue to other sounds as desired.
- 4) To turn off the Conair® Serene Sounds System, turn the ON/OFF switch to the OFF position. The sound that was last selected will be remembered and it will be reproduced automatically the next time your sound system is turned on.
- 5) To adjust the speaker volume, turn the volume control counter clockwise.
- 6) To set the timer (optional), press the TIMER button repeatedly until the desired time (15, 30 or 60 minutes) lights up. The sound system will turn off automatically at the end of the selected time. To turn off the sound system manually, turn the volume control counterclockwise to the OFF position.

CARE OF YOUR CONAIR® SERENE SOUNDS SYSTEM

- 1) Before cleaning remove the batteries.
- 2) Clean the Serene Sounds System only with a soft, slightly damp cloth.
Never allow water or any other liquid to come into contact with the sound system.
- 3) DO NOT IMMERSE IN ANY LIQUID TO CLEAN. Never use abrasive cleaners.
- 4) Do not attempt to repair the Serene Sounds System.

YOUR CONAIR® SERENE SOUNDS SYSTEM AT A GLANCE

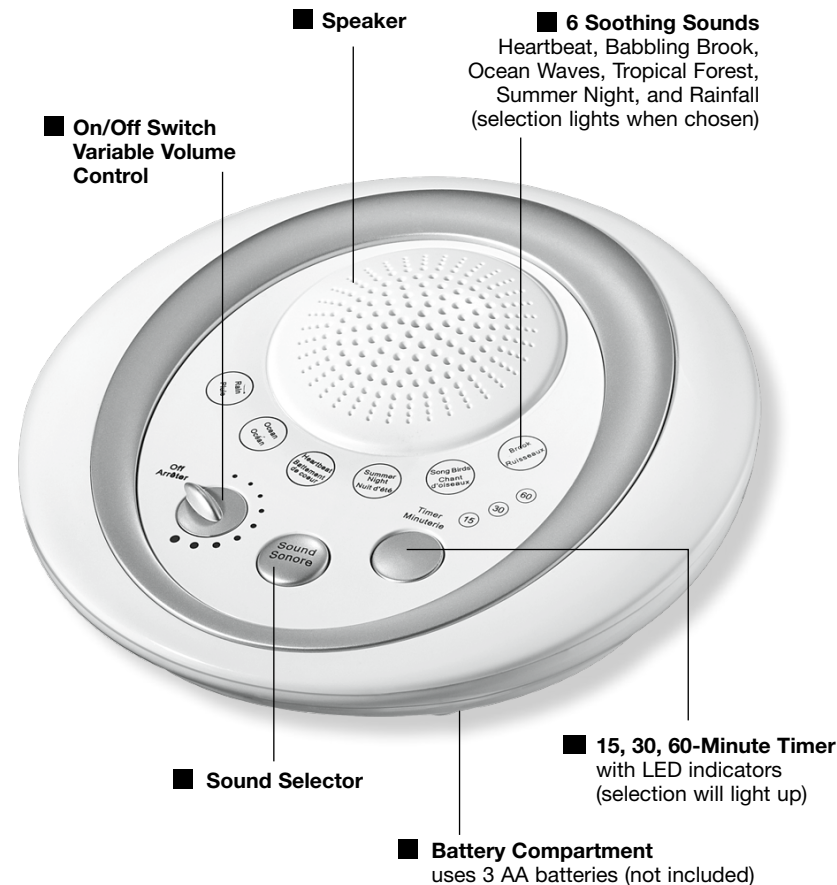

LIMITED ONE YEAR WARRANTY

Conair will (at our option) repair or replace your appliance free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center nearest you, together with your sales slip and \$5.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a purchase receipt, the warranty period will be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, OBLIGATIONS OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12 MONTH DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Service Centers

Conair Corporation
Service Department
150 Milford Road
East Windsor, NJ 08520

Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307

Visit us on the web at: www.conair.com
©2012 Conair Corporation
East Windsor, NJ 08520, Glendale, AZ 85307

IB-11329
SU9
12PS130344

serene sounds^{with} timer



INSTRUCTION BOOKLET FOR ALL SU9 MODELS

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®